SECTION 8: Numbering Head

CONTENTS

1. System Overview 8-1

2. The Numbering Head 8-2

2. Installing Repeat & Skip Wheels 8-3

3. Numbering Head Maintenance 8-6

4. Numbering Head Lubrication 8-6

Numbering Head

1. System Overview

The Numbering head is designed to print repeated, skipped, or sequential numbers on a variety of media and can be adjusted vertically and horizontally to print almost anywhere on a page. Up to four Numbering heads can be installed on one Head holder ring and each cylinder can accomodate up to three Rings (straight and convex heads cannot be installed on the same ring).

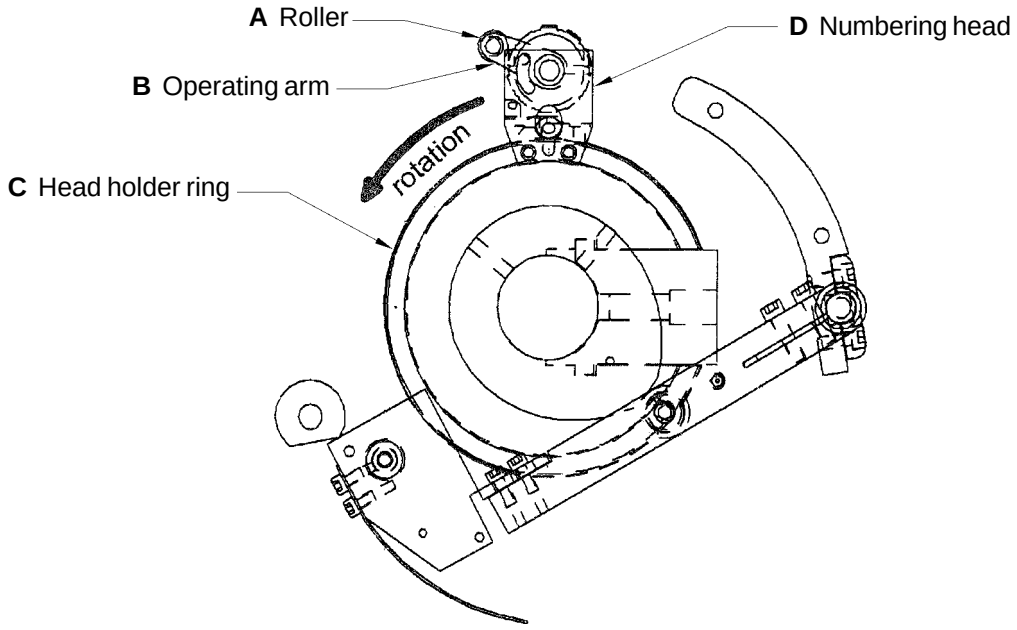

A Roller: The Roller is attached to the Operator arm. It is the point of contact between the Tripping cam and the Numbering head.

B Operating arm: When depressed, the Operating arm causes the Numbering head to increment.

C Head holder ring: The Numbering heads are secured to the Head holder ring.

D Numbering Head: The Numbering head prints the number or letter designation on the media.